 




50

XM
501-00/1

1

PARTS LIST



Ref.	Description	Func.	Ref.	Description	Func.
1	Warning lamps central display unit	52	155	L.H. front wheel sensor	57
2	R.H. display unit		156	R.H. front wheel sensor	57
	(computer, clock, exterior temperature)	52	157	L.H. rear wheel sensor	57
3	L.H. display unit (electronic or silhouette)	52	158	R.H. rear wheel sensor	57
4	Automatic gearbox gear selector display unit	59	159	Steering wheel sensor	58
5	Front cigar lighter	55	160	TDC sensor	51
6	Rear cigar lighter	55	161	Fuel pressure sensor	-
10	Ignition distributor	51	162	Reference cylinder sensor	51
15	Alternator	53	163	L.H. volumetric sensor	67
20	L.H. horn	54	164	R.H. volumetric sensor	67
21	R.H. horn	54	165	Injector needle lift sensor	51
			166	Delivery valve position sensor	51
35	Battery	TT	167	Auto. gearbox inlet speed sensor	59
40	Instrument cluster	52	168	Auto. gearbox outlet speed sensor	59
41	ABS hydraulic control block	57			
42	Auto. gearbox electro-hydraulic control block	59	170	Flasher unit	54
45	Ignition coil	51	173	Compact disc loader	65
48	Max. fuse box (single or No.1)	64	176	Coded anti-theft device keyboard	51
49	Max. fuse box No.2	64	178	Radio-telephone set	65
50	Supply box	TT	180	Additional air control	51
51	Branch box	TT	181	Radio control	65
52	Junction box	TT	182	Heater control	64
53	Water temperature control unit	52-64	183	Air blower control	64
54	Bulb failure detection unit	52-64	184	Air conditioning control	64
55	Door locking control unit	67	185	Cold start control	51
56	Distance sensor interface	51-58	186	Cooled air blower control	64
57	Electric windows control unit	67			
58	Door locking receiver control unit	67	210	Lighting selector switch (headlamp position)	54
59	Preheater control unit	51	211	L.H. selector switch	
60	Cruise control control unit	59		(lighting, direction indicator, horn)	54
61	Catalytic converter control unit	51	212	R.H. selector switch	
62	Earth control unit	TT		(windscreen wiper, computer)	56
63	Additional fuse box	-	213	Parking selector switch	52
64	Fuel transfer pump control unit	-	214	Cruise control selector switch	59
65	Water level control unit	-	215	Rear view mirrors selector switch	56
67	Anti-theft alarm control unit	67	216	Automatic gearbox selector switch	
68	Electric rear view mirror control unit	56		(on the gearbox)	59
70	Pyrotechnic seat belts control unit	55	217	Automatic gearbox selector switch	
71	L.H. front heated seat regul. control unit	63		(on the lever)	59
72	R.H. front heated seat regul. control unit	63	218	Folding rear view mirrors switch	56
73	L.H. rear heated seat regul. control unit	63			
74	R.H. rear heated seat regul. control unit	63	254	Horn compressor	54
			255	Refrigeration compressor	64
100	Sparking plugs	51	260	Tachometer	51-52
101	Preheater plugs	51	270	HT coil suppressor	51
130	Lights-on audible warning	54	280	Diagnostic connector	TT
131	Overspeed audible warning	59	294	Driver's seat belt switch	52
132	Radio-telephone audible warning	65	295	L.H. front door deadlocking switch	67
133	Hydraulic pressure and/or fluid level audible warning	52	296	R.H. front door deadlocking switch	67
			297	L.H. rear door deadlocking switch	67
			298	R.H. rear door deadlocking switch	67
139	Automatic gearbox E.C.U.	59	299	Horn switch	52
140	ABS E.C.U.	57	300	Anti-theft switch	TT
141	Air conditioning E.C.U.	64	301	Glove box lighting switch	55
142	Injection E.C.U.	51	302	Boot lighting contact	55
143	Suspension E.C.U.	58	303	Bonnet L.H. closing contact (w.l.)	67
144	Recycling control E.C.U.	51	304	Bonnet R.H. closing contact (w.l.)	67
145	Airbag E.C.U.	55	305	Driver's door closing contact (w.l.)	67
146	L.H. side airbag E.C.U.	55	306	Passenger's door closing contact (w.l.)	67
147	R.H. side airbag E.C.U.	55	307	L.H. rear door closing contact (w.l.)	67
150	Front knock sensor	51	308	R.H. rear door closing contact (w.l.)	67
151	Rear knock sensor	51	309	Tailgate closing contact (w.l.)	67
152	Engine speed sensor	51	310	L.H. front door pillar contact	55
153	Body movement sensor	58	311	R.H. front door pillar contact	55
154	Distance sensor	51	312	L.H. rear door pillar contact	55



Ref.	Description	Func.	Ref.	Description	Func.
313	R.H. rear door pillar contact	55	470	Radio-telephone sender unit	65
314	Reversing lamps contact	54	474	L.H. front door lock assembly	67
315	Handbrake switch	52	475	R.H. front door lock assembly	67
316	Coolant level switch	52	476	L.H. rear door lock assembly	67
317	Hydraulic fluid level switch	52	477	R.H. rear door lock assembly	67
318	Throttle butterfly spindle switch	51	478	Driver's pyrotechnic seat belt reel	55
319	Stoplamp switch	54	479	Passenger's pyrotechnic seat belt reel	55
320	Rotary switch	65	480	L.H. rear lamp cluster	54
321	Tailgate locking switch	67	481	R.H. rear lamp cluster	54
322	Atmospheric pressure switch	51	482	L.H. front fog lamp	54
323	Sun roof closed position switch	67	483	R.H. front fog lamp	54
324	Sun roof end of travel switch	67	484	L.H. rear fog lamp	54
325	Sun roof end of travel tilt position switch	67	485	R.H. rear fog lamp	54
326	Choke switch	52	486	L.H. dipped beam	54
327	Differential locking switch	-	487	R.H. dipped beam	54
328	Clutch switch	-	488	L.H. front direction indicator	54
329	Recycling switch	51	489	R.H. front direction indicator	54
330	Post-heater switch	51	490	L.H. rear direction indicator	54
			491	R.H. rear direction indicator	54
340	Flowmeter	51	492	L.H. side lamp	54
350	Starter motor	53	493	R.H. side lamp	54
361	Door anti-jolt diode	58	494	L.H. rear stop and tail lamp	54
362	Tailgate anti-jolt diode	58	495	R.H. rear stop and tail lamp	54
363	Supply anti-jolt diode	58	496	L.H. tail lamp on tailgate	54
375	Ignition distributor	51	497	R.H. tail lamp on tailgate	54
380	L.H. front door sill lighting	55	498	L.H. reversing lamp	54
381	R.H. front door sill lighting	55	499	R.H. reversing lamp	54
382	L.H. rear door sill lighting	55	500	L.H. direction indicator repeater	54
383	R.H. rear door sill lighting	55	501	R.H. direction indicator repeater	54
384	Glove box lighting	55	502	L.H. headlamp	54
385	Front ashtray lighting	55	503	R.H. headlamp	54
386	Rear ashtray lighting	55	504	L.H. stoplamp	54
387	Ashtray lid control lamp	55	505	R.H. stoplamp	54
388	Radio flap control lamp	55	506	L.H. tail lamp	54
389	Boot lighting	55	507	R.H. tail lamp	54
390	Passenger's sun visor mirror lighting	55	508	Additional stoplamp	54
391	Registration plate L.H. lamp	54	509	L.H. rear lamp cluster	54
392	Registration plate R.H. lamp	54		(on tailgate)	
393	Under bonnet lighting	55	510	R.H. rear lamp cluster	54
394	Heater control lighting	64		(on tailgate)	
396	Anti-theft lighting	55	540	Fuse (F...)	-
397	L.H. boot lamp	55			
398	R.H. boot lamp	55	541	L.H. heated windscreen washer jet	56
399	Boot lamp on tailgate	55	542	R.H. heated windscreen washer jet	56
400	Driver's sun visor mirror lighting	55	548	Refrigeration unit	64
427	Rear suspension electrovalve	58	550	L.H. front loudspeaker	65
428	OCR air electrovalve	51	551	R.H. front loudspeaker	65
429	Fuel pump cut-out electrovalve	51	552	L.H. front tweeter loudspeaker	65
430	Canister discharge electrovalve	51	553	R.H. front tweeter loudspeaker	65
431	Fast idling electrovalve	51	554	L.H. rear loudspeaker	65
432	Idling actuator	51	555	R.H. rear loudspeaker	65
433	Suspension electrovalve (single or front)	58			
434	Canister electrovalve	51	563	Fault finding indicator (vehicle silhouette)	-
435	Float chamber venting solenoid	51	570	Injectors	51
436	Idle cut off electrovalve	51	580	Driver's seat position switch	63
437	Recycling proportional electrovalve	51	581	Passenger's seat position switch	63
438	Cruise control electrovalve	59	582	Air conditioning switch	64
439	ACAV C electrovalve	51	583	Rear function locking switch	55-67
440	ACAV L electrovalve	51	584	Driver's backrest switch	63
441	Ignition distr. vacuum electrovalve	51	585	Passenger's backrest switch	63
442	Recycling electrovalve	51	586	Rear screen wipe/wash switch	56
443	Advance correction electrovalve	51	587	Front fog lamp switch	54
444	Turbo control electrovalve	51	588	Rear fog lamp switch	54
445	Injection delivery control electrovalve	51	589	Hazard warning lamps switch	54
446	Throttle butterfly control electrovalve	51			
447	Automatic gearbox electrovalve assembly	59	590	Driver's electric window switch	67



Ref.	Description	Func.	Ref.	Description	Func.
591	Passenger's electric window switch (on the driver's door)	67	713	R.H. air recycling motor	64
592	Passenger's electric window switch (on the passenger's door)	67	714	ABS hydraulic pump motor	57
593	L.H. electric rear window switch on door	67	715	L.H. headlamp adjusting device motor	54
594	L.H. electric rear window switch on console	67	716	R.H. headlamp adjusting device motor	54
595	R.H. electric rear window switch on door	67	717	Differential locking motor	59
596	R.H. electric rear window switch on console	67	720	Electric cooling fan (single or L.H.)	64
597	Heated rear screen switch	56	721	R.H. electric cooling fan	64
598	Interior lamp switch	55	724	Anti-pinch electric window reduction motor	67
599	Recycling switch	64	730	L.H. front door deadlocking motor	67
600	Driver's seat height adjustment switch	63	731	R.H. front door deadlocking motor	67
601	Driver's heated seat switch	63	732	L.H. rear door deadlocking motor	67
602	Passenger's heated seat switch	63	733	R.H. rear door deadlocking motor	67
603	L.H. rear heated seat switch	63	740	L.H. rear interior lamp	55
604	R.H. rear heated seat switch	63	741	R.H. rear interior lamp	55
605	Central armrest switch	63	742	Front centre interior lamp	55-65
606	Suspension switch	58	743	Rear centre interior lamp	55
607	Sun roof switch	67	750	L.H. front brake pads	52
608	Headlights adjustment device switch	54	751	R.H. front brake pads	52
609	Map reading lamp switch	55	755	Fuel pump	51
610	Differential locking switch	59	756	Headlamp washer pump	56
611	Cruise control switch	59	757	Windscreen washer pump	56
613	Rear screen wiper switch	56	758	Rear screen washer pump	56
615	Alarm switch (volumetric protection)	67	759	Recycling vacuum pump	51
620	Inertia switch	51	760	Cruise control vacuum pump	59
650	Fuel gauge	52	761	Fuel transfer pump	-
660	Map reading lamp	55	763	Diesel injection pump	51
670	Brake pressure switch (suspension)	51-58	765	Radio set	65
671	Engine oil pressure switch	51	770	Throttle spindle potentiometer	51
672	Hydraulic pressure switch	52	771	Accelerator pedal potentiometer	58
673	Air filter pressure switch	51	772	Richness potentiometer	51
674	Turbo overcharging pressure switch	51	773	Throttle lever potentiometer	51
680	Ignition module	51	775	Pressostat	64
681	Air blower control module	64	778	Electric cooling fan test plug	64
682	Eurobag steering wheel module	55	779	T.D.C. sensor plug	51
683	Diesel injection pump module	51	780	Supply socket (accessories)	55
685	Clock	55	781	ABS diagnostic socket	67
690	Driver's seat pull/push motor	63	782	Air conditioning diagnostic socket	64
691	Passenger's seat pull/push motor	63	783	Injection diagnostic socket	51
692	Driver's seat backrest motor	63	784	Suspension diagnostic socket	58
693	Passenger's seat backrest motor	63	785	Emission control diagnostic socket	51
694	Windscreen wiper motor	56	786	Headlamp : L.H. main and dipped beams	55
695	Rear screen wiper motor	56	787	Headlamp : R.H. main and dipped beams	55
696	L.H. electric front window motor	67	790	Air blower (single or L.H.)	64
697	R.H. electric front window motor	67	791	R.H. air blower	64
698	L.H. electric rear window motor	67	793	Coded anti-theft device relay	51
699	R.H. electric rear window motor	67	795	Anti-theft alarm relay	67
700	Air mixing motor	64	800	Anti-jolt relay	58
701	Driver's seat raising motor	63	801	Automatic gearbox relay	59
702	Sun roof motor	67	802	Injection E.C.U. relay	51
703	Driver's door locking motor	67	804	Air conditioning relay	64
704	Passenger's door locking motor	67	805	Refrigeration compressor cut-off relay	64
705	L.H. rear door locking motor	67	806	Front fog lamps relay	54
706	R.H. rear door locking motor	67	807	Injection relay	51
707	Fuel filler flap locking motor	67	807A	Power multifunction double relay	51
708	Tailgate locking motor	67	807B	Engine test multifunction double relay	51
709	Central armrest motor	63	808	Headlamp washer relay	56
710	Air distribution motor	64	809	Electric front window relay	67
711	Air recycling motor (single or L.H.)	64	810	Electric rear window relay	67
712	Idling regulation stepper motor	51	811	Driver's seat handling relay	63
			812	Passenger's seat handling relay	63
			813	Cooling fan relay (slow/fast speed)	64



Ref.	Description	Func.	Ref.	Description	Func.
814	Cooling fan relay (fast speed)	64	900	Rear or single oxygen sensor	51
815	Cooling fan relay (speed inverter)	64	901	Screen washer water level sensor	52-56
816	Fuel pump relay	51	902	Engine oil level sensor	52
817	Front heated seats relay	63	903	Injection air pressure sensor	51
818	Oxygen sensor relay	51	904	Engine oil pressure sensor	51-52
819	Rear fog lamps relay	54	905	Turbo air pressure sensor	51
820	Heated rear screen relay	56	906	Exterior air temperature sensor	52
821	Air conditioning additional relay	64	907	Injection air temperature sensor	51
822	Injection refrigeration compressor cut-off relay	51	908	Air conditioning duct temperature sensor	64
823	Sun roof relay	67	909	Engine water temperature sensor (injection)	51
824	Rear heated seats and/or sun roof relay	63	910	Engine water temperature sensor	52-64
825	Dipped beams relay	54	911	Engine water temperature sensor (dial)	52
826	Choke heating relay	51	912	Evaporator temperature sensor	64
827	Dipped beams (day time) or Dim-dip relay	54	913	Vehicle interior air temperature sensor	64
828	Cooling fan relay (against fuel vapour lock)	64	914	Water-in-fuel sensor	51
829	Side and tail lamps (day time) relay	54	915	Water temperature switch sensor	52
830	Recycling relay	51	916	Air conditioning water temperature sensor	64
831	Cruise control relay	59	917	Catalytic converter temperature sensor	51
832	Sun roof sliding relay	67	918	Engine oil temperature sensor	52
833	Sun roof tilt position relay	67	919	Engine water level sensor	52
834	Headlamps relay	54	920	Oil temperature switch sensor (on automatic gearbox)	51
836	Ignition relay	51	921	Engine water temperature sensor (emission control)	51
837	Lighting timer relay	55	922	Fuel temperature sensor	52
838	Automatic gearbox idling speed relay	51-59	923	Engine water temperature switch sensor (emission control)	51
839	Cooling fan relay (air conditioning)	51-64	924	Automatic gearbox oil temperature sensor	59
840	Fuel injection correction relay	51	940	Advance timing system	51
841	Electric window re-energising relay	67			
842	Air blower relay	64	960	Anti-jolt timer	58
843	Horn compressor relay	57	961	Lighting timer	55
844	ABS main relay	57	962	Windscreen wiper timer	56
845	ABS hydraulic pump relay	57	963	Rear screen wiper timer	56
846	Fuel transfer pump relay	-	964	Cooling fan timer	64
848	Engine running information relay	TT	969	Engine water pre-warning thermal switch	52
850	L.H. rear seat base resistance	63	970	Engine water warning thermal switch	51-52
851	R.H. rear seat base resistance	63	971	Radiator coolant thermal switch	64
852	L.H. rear seat backrest resistance	63	972	Engine coolant thermal switch (against fuel vapour lock)	64
853	R.H. rear seat backrest resistance	63	973	Coolant thermal switch (air con.)	64
854	L.H. front seat resistance	63	974	Coolant thermal switch (emission control)	51
855	R.H. front seat resistance	63	975	Engine oil contact switch	51
856	Choke heater resistance relay	51			
857	Carburettor base heating resistance	51	990	Heated rear screen	56
858	Dipped beams resistance	54	991	Anti-theft alarm warning lamp	67
859	Air blower speed resistance	64	992	Airbag warning lamp	55
860	Coding resistance	51			
861	Inlet air heating resistance	51			
862	Injector additional resistance	51			
863	Atmospheric pressure switch resistance	51			
864	Electric cooling fan resistance	64			
865	Oil fumes heating element	51			
866	Emission control resistance	51			
867	Automatic gearbox pressure regulators assembly	59			
874	Sun roof supply relay	67			
875	L.H. rear view mirror	56			
876	R.H. rear view mirror	56			
880	Lighting rheostat	52-65			
884	Driver's airbag	55			
885	Passenger's airbag module	55			
886	L.H. side airbag	55			
887	R.H. side airbag	55			
888	Siren	67			
899	Front oxygen sensor	51			